HOME DECORATORS collection®

BF-24802 MSL CORNER CRAFT TABLE 31H X58W X41"D BX2

INV#07952

ASSEMBLY INSTRUCTIONS

Made In China

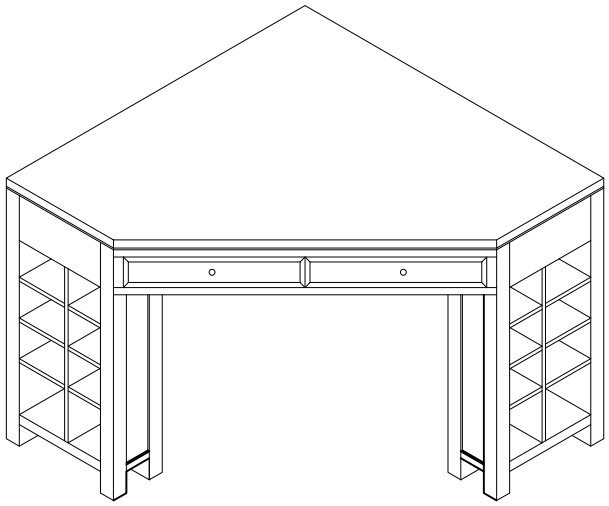

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

PARTS LIST

A 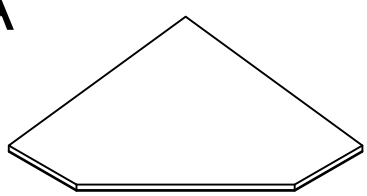 TOP PANEL-1PC	B  LEFT SIDE PANEL-1PC	C  LEFT STAND PANEL-1PC
D RIGHT SIDE PANEL-1PC	E RIGHT STAND PANEL-1PC	F 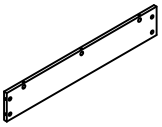 BACK PANELS-2PCS
G STAND PANELS-2PCS	H  ACROSS PANELS-6PCS	I  FRONT PANELS-2PCS
J  BOTTOM PANELS-2PCS	K  BACK STAND PANEL-1PC	L 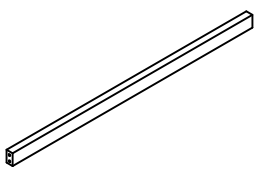 DOWN ACROSS PANELS-2PCS

M 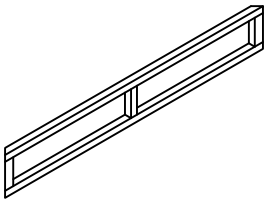 FRONT FRAME-1PC	N 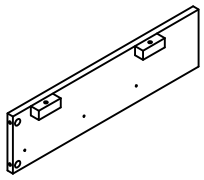 SMALL LEFT SIDE PANEL-1PC	O 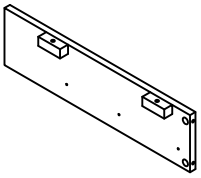 SMALL RIGHT SIDE PANEL-1PC
P 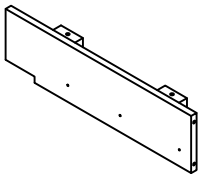 SMALL STAND PANEL-1PC	Q 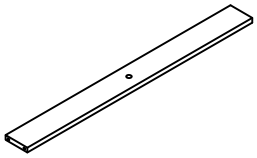 SMALL BOTTOM PANEL-1PC	R  SMALL BACK PANELS-2PCS
S 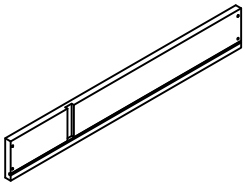 LEFT DRAWER PANEL SIDES-2PCS	T 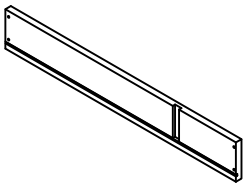 RIGHT DRAWER PANEL SIDES-2PCS	U 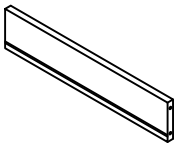 DRAWER PANEL BACKS-2PCS
V 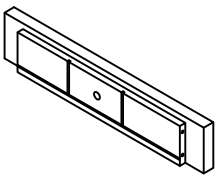 LEFT DRAWER PANEL FRONT-1PC	W 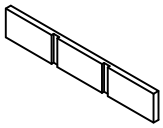 SMALL DRAWER ACROSS PANELS-2PCS	X 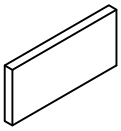 SMALL DRAWER STAND PANELS-4PCS
Y 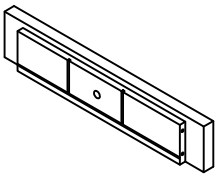 RIGHT DRAWER PANEL FRONT-1PC	Z 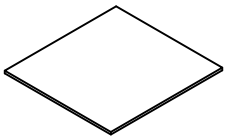 DRAWER PANEL BOTTOMS-2PCS	A1 CAM-LOCKS-44PCS
B1 SCREWS-4PCS	C1 ALLEN WRENCH-1PC	D1 SCREWS-20PCS

E1 DOWELS-32PCS	F1  SCREWS-5PCS	G1  SCREWS-24PCS
H1 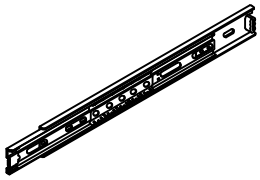 OUTER SLIDERS-4PCS	I1 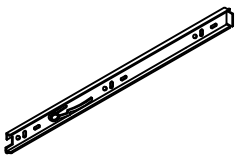 INNER SLIDES-4PCS	J1  FEET-9PCS
K1 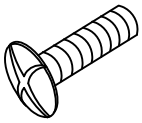 SCREWS-2PCS	L1 KNOBS-2PCS	M1 NUTS-4PCS
N1 SCREWS-16PCS	O1 SCREWS-6PCS	P1 CAM-TOOL-1PC
Q1  CAM-BOLTS-44PCS		

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

HOW TO SEPARATE GLIDES

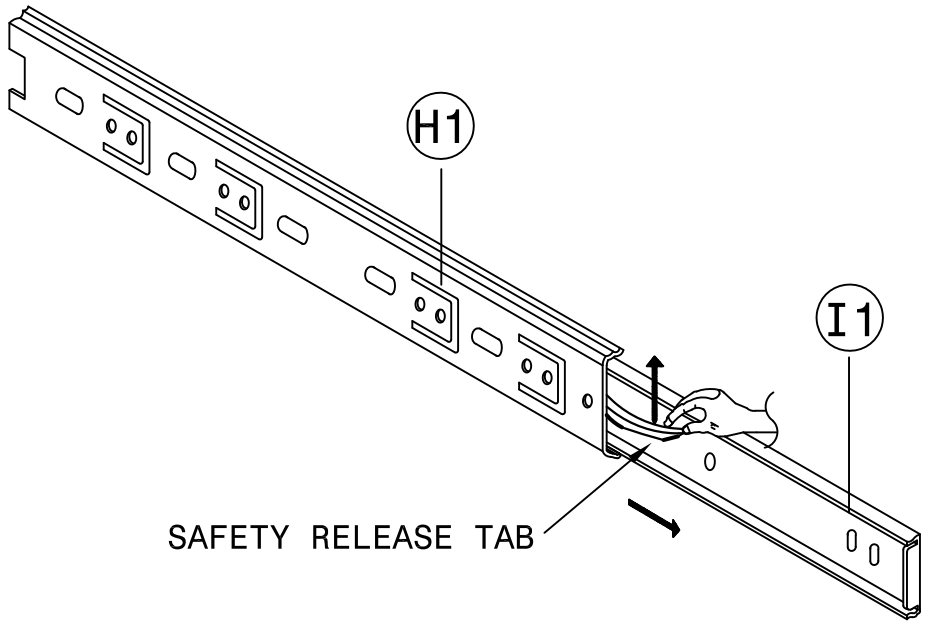

PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDE

NOTE: • UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

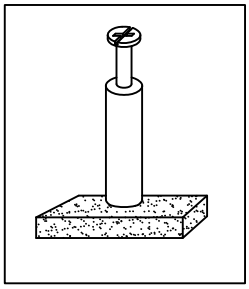

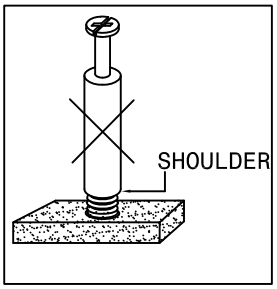

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

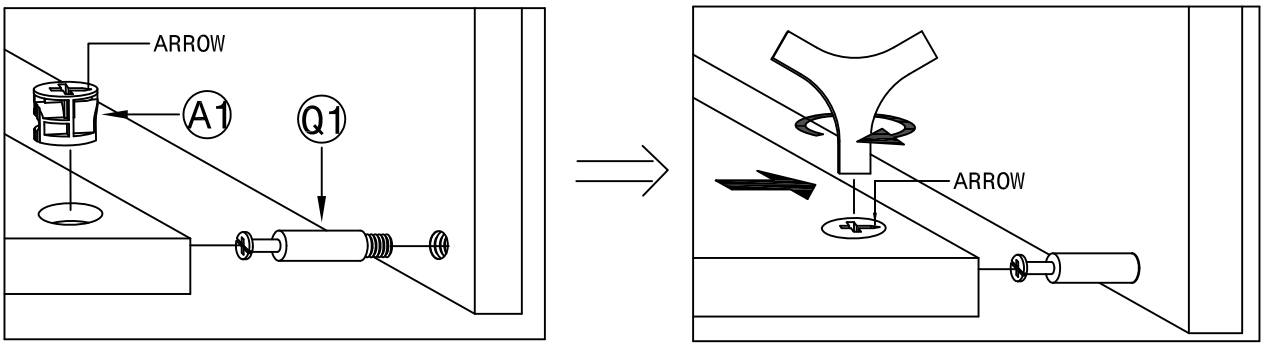

NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

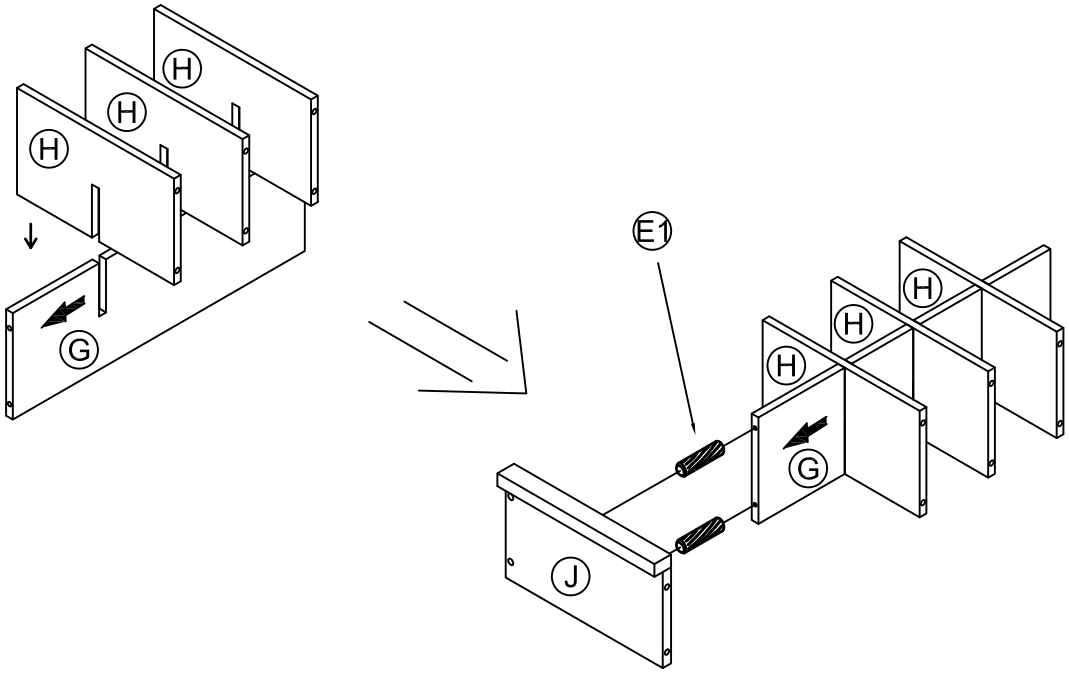

1). ASSEMBLE THE STAND PANEL(G).

- INSERT THE ACROSS PANELS(H) INTO THE SLOTS IN THE STAND PANEL(G).
- INSERT THE 2 DOWELS(E1) INTO THE HOLES IN THE STAND PANEL(G) AND ATTACH BOTTOM PANEL(J).

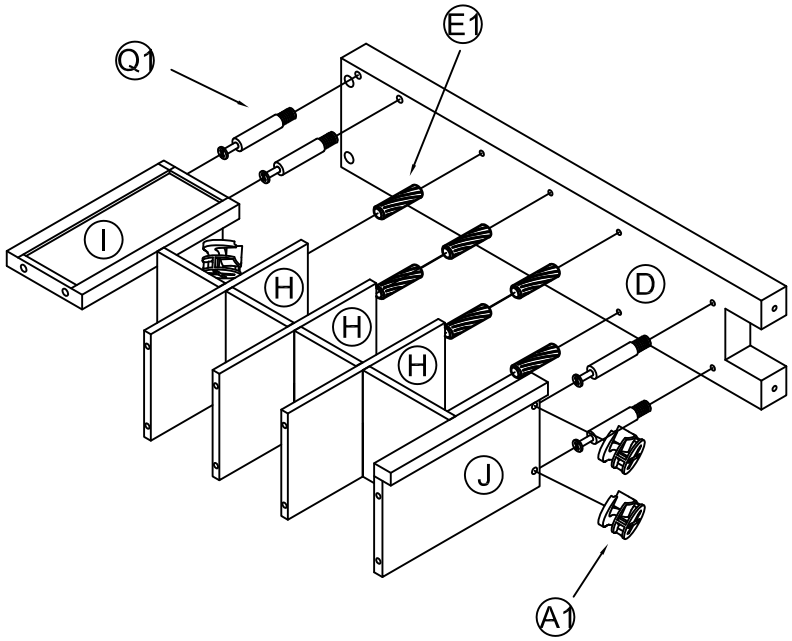

2). ASSEMBLE THE RIGHT SIDE PANEL(D).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 6 DOWELS(E1) INTO THE HOLES IN THE RIGHT SIDE PANEL(D).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(I/J) AND USING 4 CAM-LOCKS(A1).

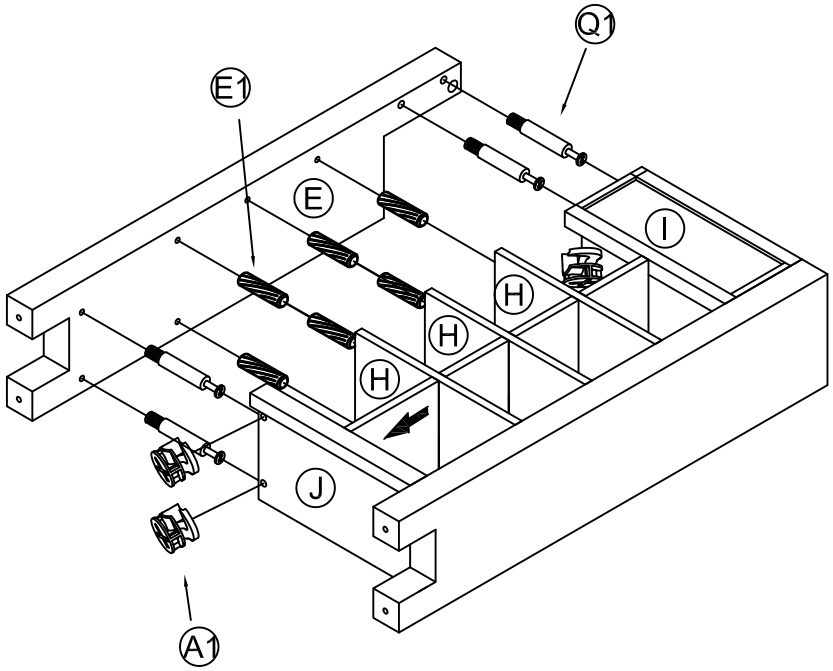

3). ASSEMBLE THE RIGHT STAND PANEL(E).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 6 DOWELS(E1) INTO THE HOLES IN THE RIGHT STAND PANEL(E).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(I/J) AND USING 4 CAM-LOCKS(A1).

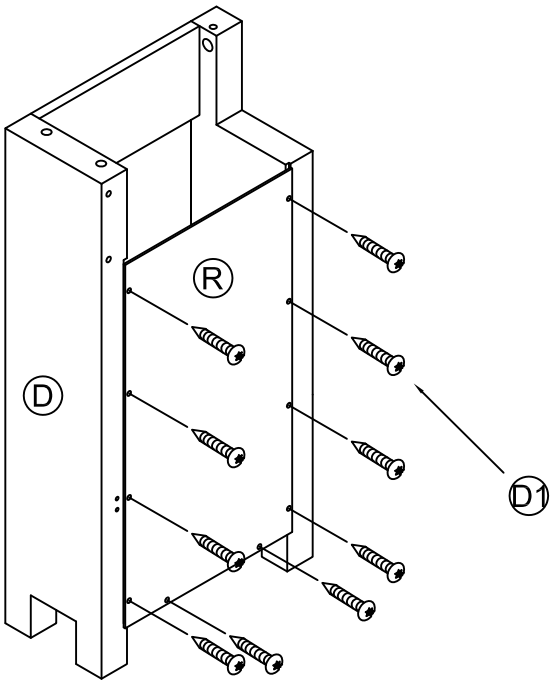

4). ASSEMBLE THE BACK PANEL(R).

- ATTACH BACK PANEL(R) TO PANELS(D/E) USING 10 SCREWS(D1).

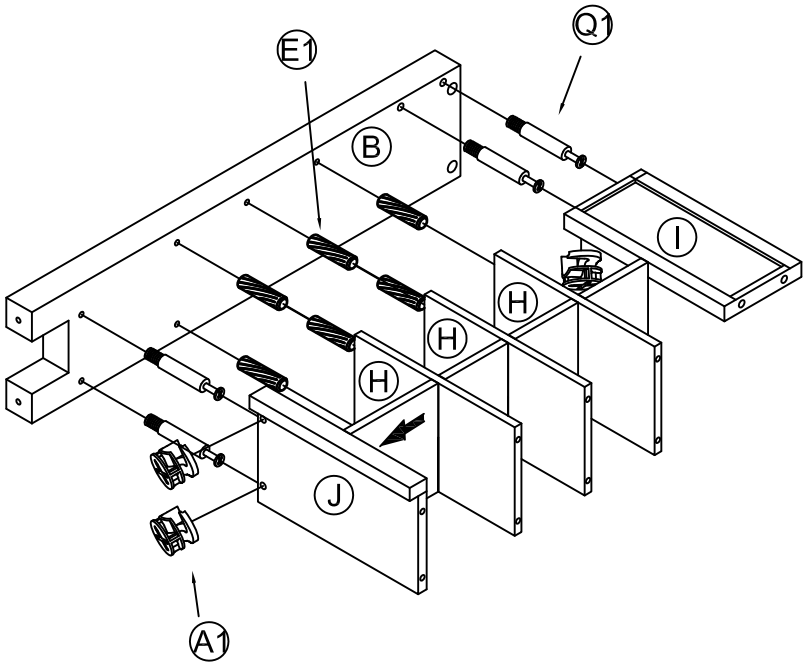

5). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 6 DOWELS(E1) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(I/J) AND USING 4 CAM-LOCKS(A1).

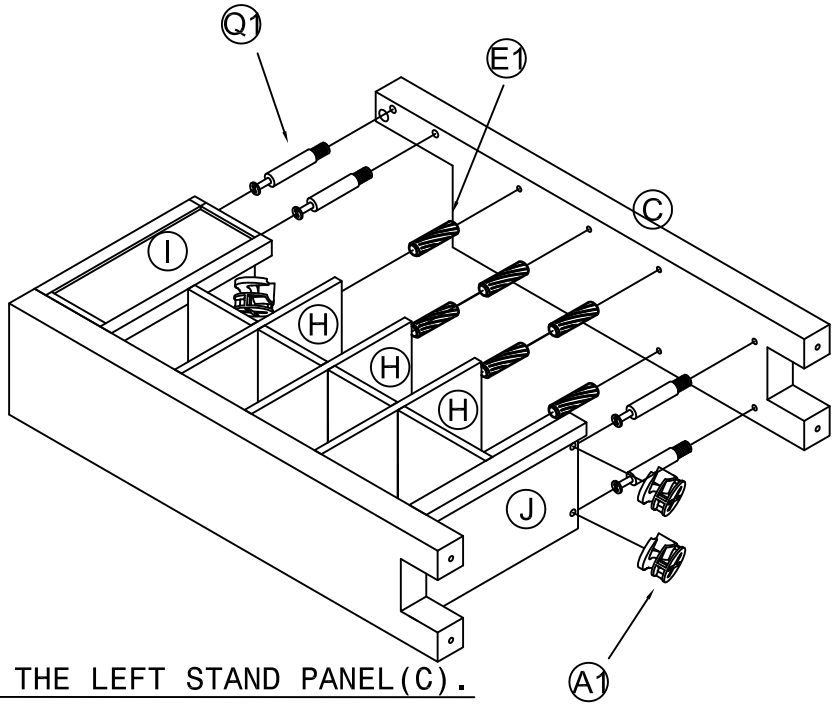

6). ASSEMBLE THE LEFT STAND PANEL(C).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 6 DOWELS(E1) INTO THE HOLES IN THE LEFT STAND PANEL(C).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(I/J) AND USING 4 CAM-LOCKS(A1).

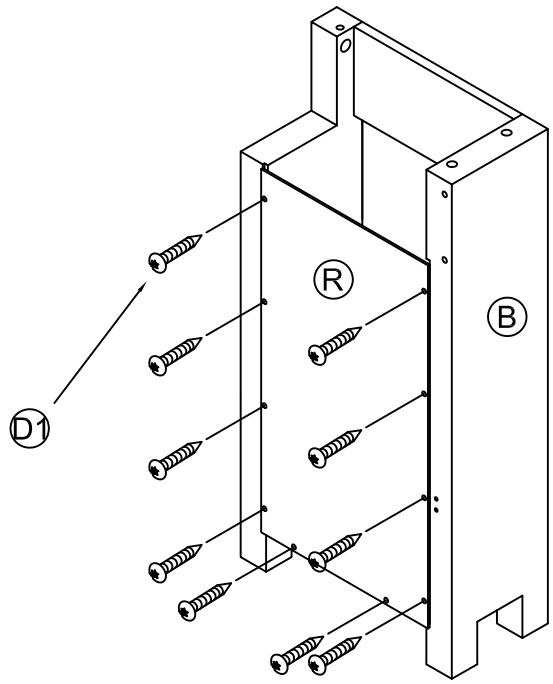

7). ASSEMBLE THE BACK PANEL(R).

- ATTACH BACK PANEL(R) TO PANELS(B/C) USING 10 SCREWS(D1).

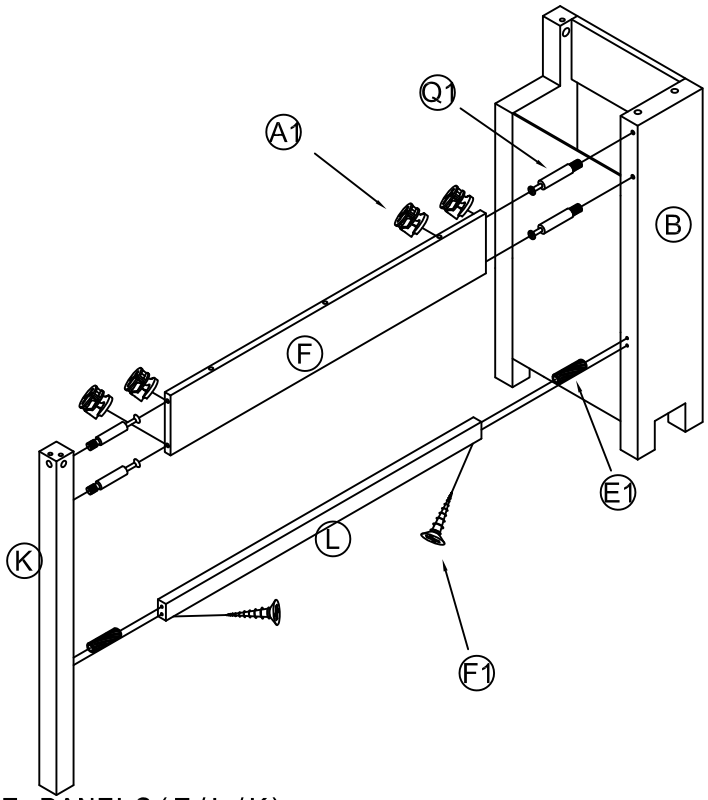

8). ASSEMBLE THE PANELS(F/L/K).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 2 DOWELS(E1) INTO THE HOLES IN THE PANELS(B/K).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(F) AND USING 4 CAM-LOCKS(A1).
- ROTATE THE 2 SCREWS(F1) INTO HOLES IN THE PANEL(L).

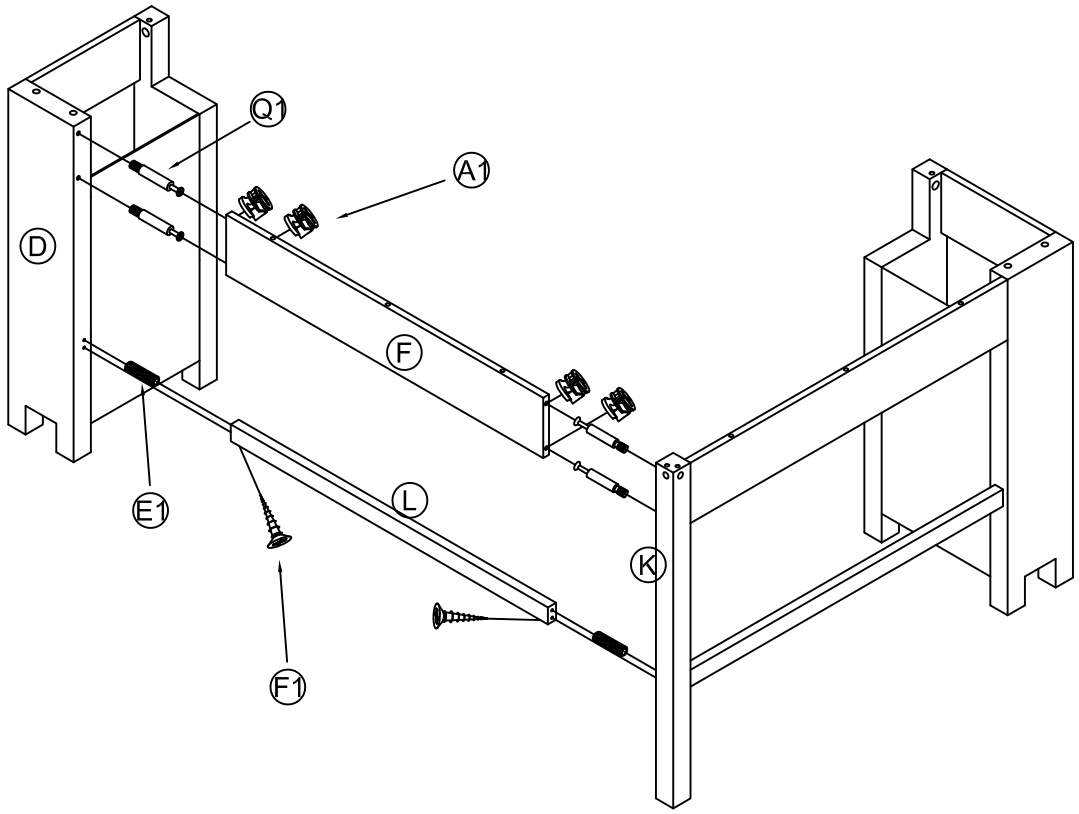

9). ASSEMBLE THE PANELS(D/F/L).

- ROTATE THE 4 CAM-BOLTS(Q1) AND INSERT THE 2 DOWELS(E1) INTO THE HOLES IN THE PANELS(D/K).
- PLACE THE 4 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(F) AND USING 4 CAM-LOCKS(A1).
- ROTATE THE 2 SCREWS(F1) INTO THE HOLES IN THE PANEL(L).

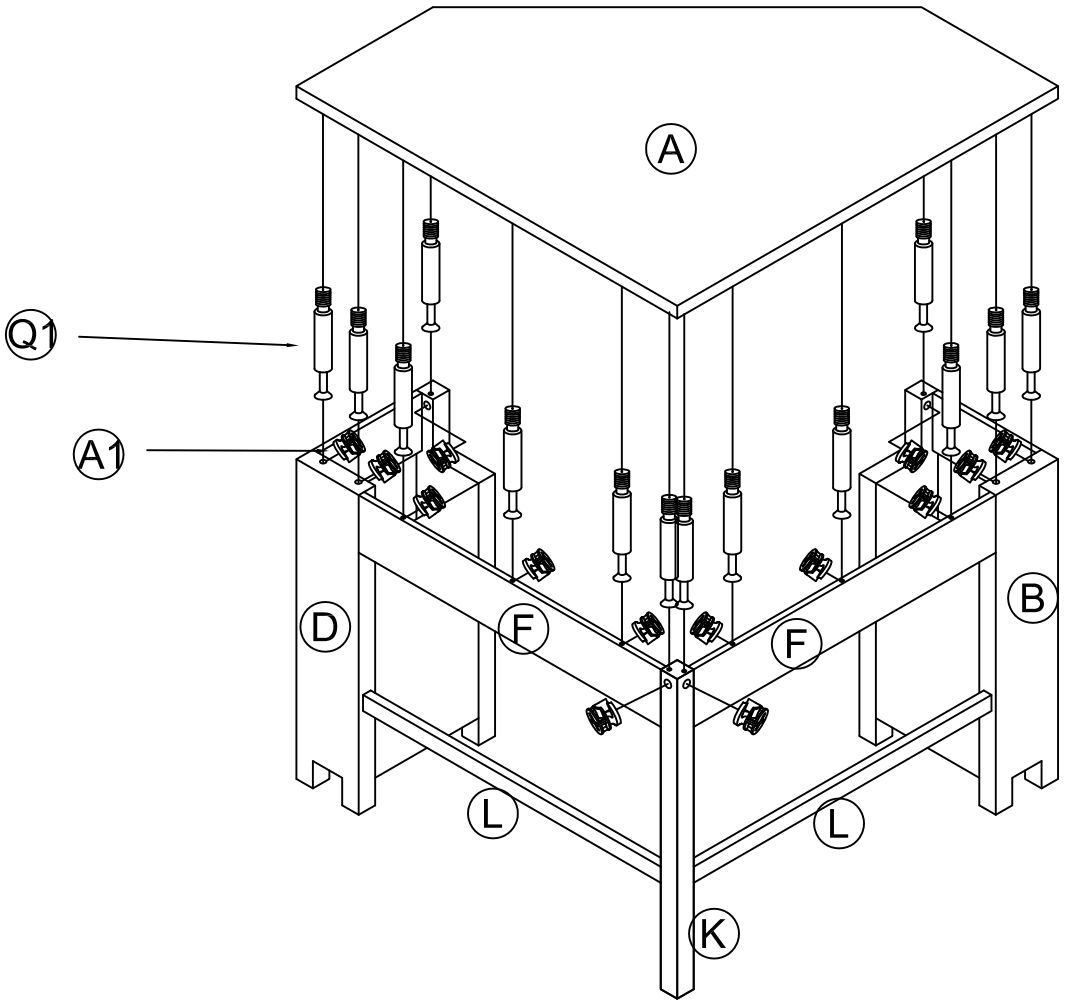

10).ASSEMBLE THE TOP PANEL(A).

- ROTATE THE 14 CAM-BOLTS(Q1)INTO THE HOLES IN THE TOP PANEL(A).
- PLACE THE 14 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(B/C/D/E/F/K) AND USING 14 CAM-LOCKS(A1).

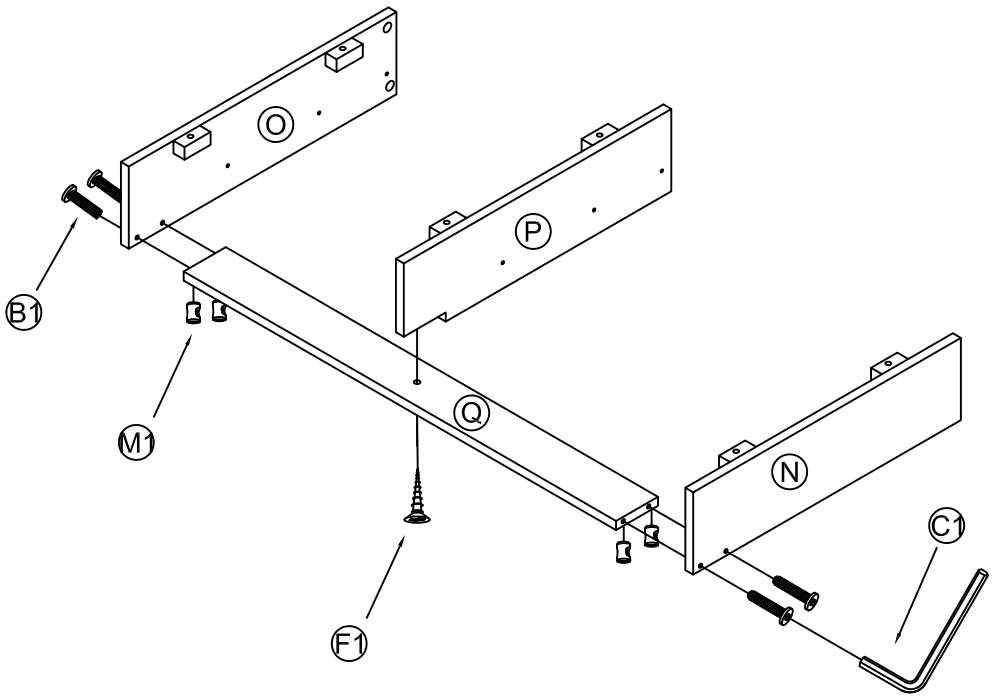

11). ASSEMBLE THE SAMLL BOTTOM PANEL(Q).

- INSERT THE 4 NUTS(M1) INTO THE HOLES IN THE SMALL BOTTOM PANEL(Q).
- ATTACH THE PANEL(N/O) TO SMALL BOTTOM PANEL(Q) USING 4 SCREWS(B1).
- ATTACH THE SMALL STAND PANEL(P) TO SMALL BOTTOM PANEL(Q) USING ONE SCREW(F1).

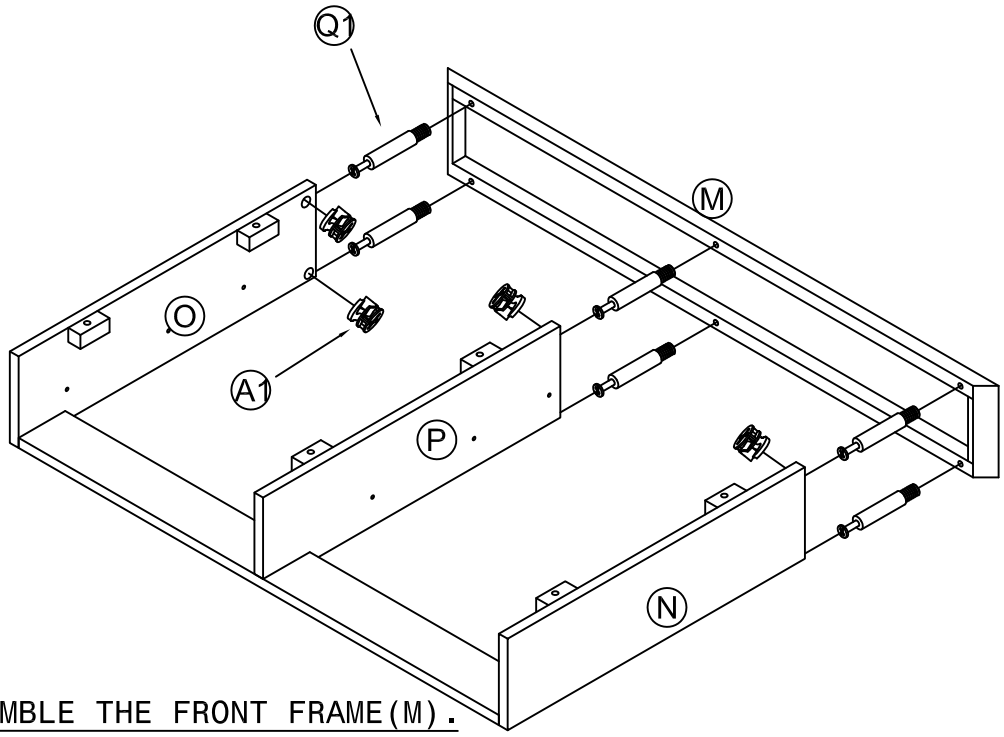

12). ASSEMBLE THE FRONT FRAME(M).

- ROTATE THE 6 CAM-BOLTS(Q1) INTO THE HOLES IN THE FRONT FRAME(M).
- PLACE THE 6 CAM-BOLTS(Q1) INTO THE HOLES IN THE PANELS(N/O/P) AND USING 6 CAM-LOCKS(A1).

THESE FEET CAN FLUCTUATE, EXTENT ABOUT 5MM.

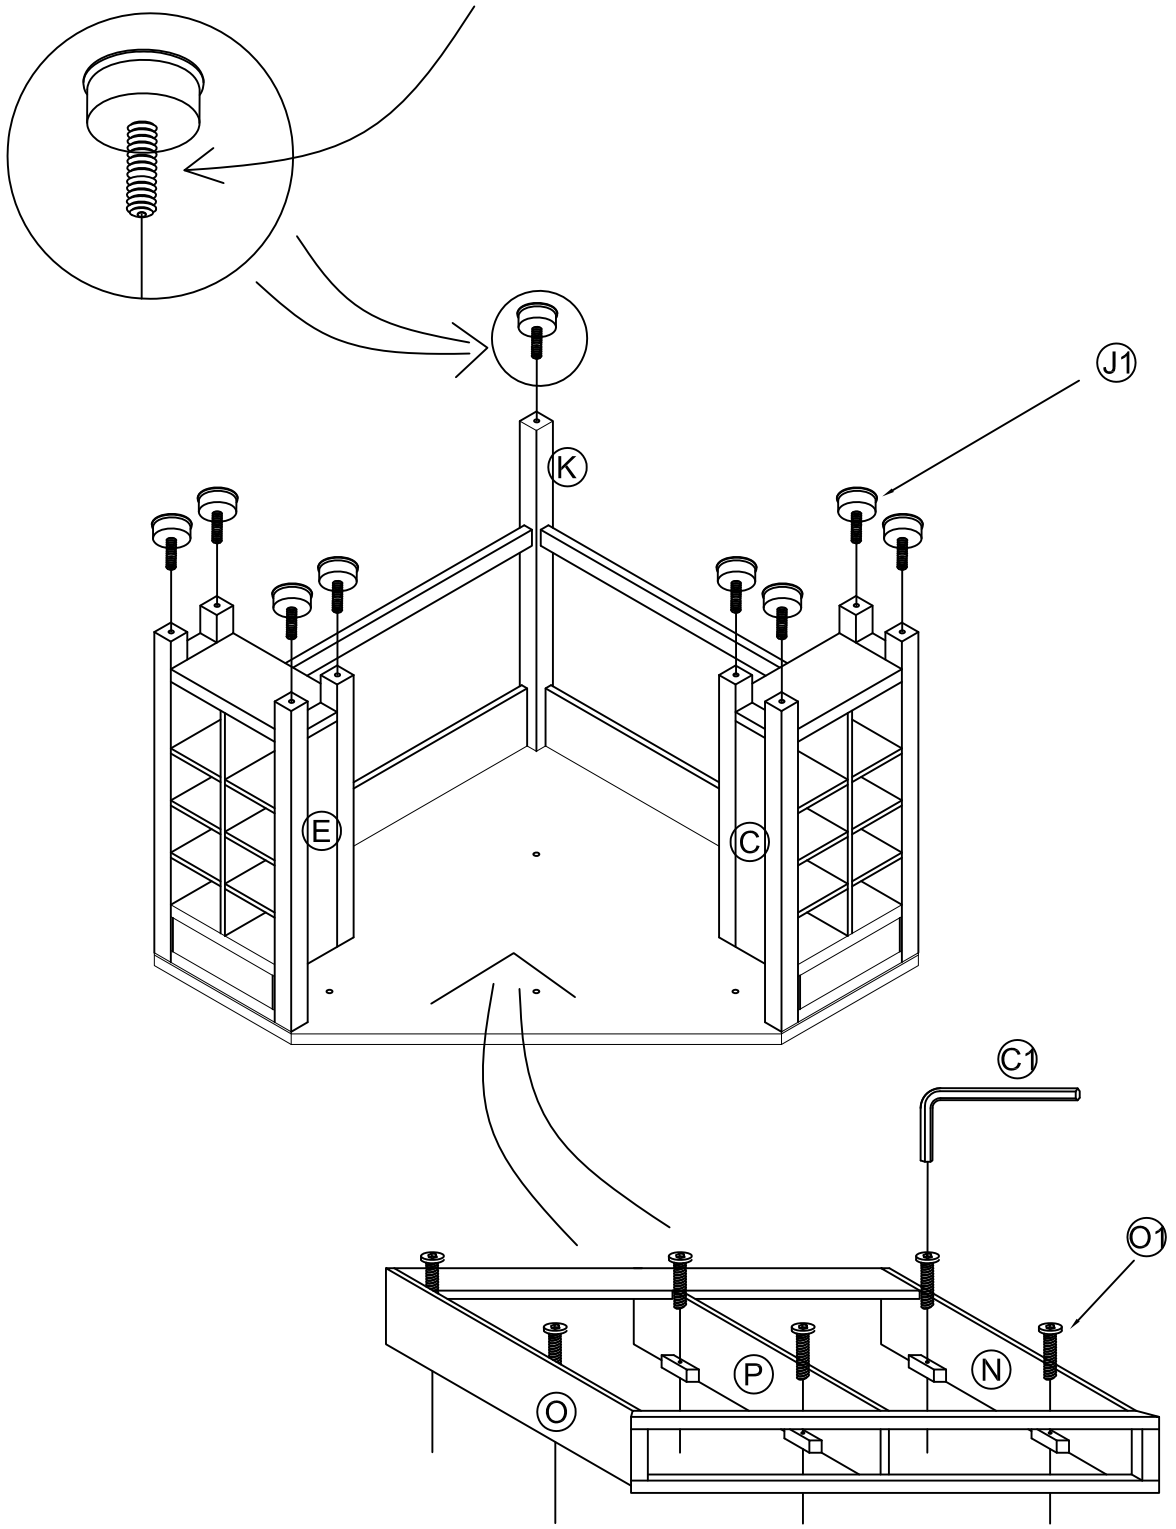

13). ASSEMBLE THE FRAME AND FEET(J1).

- ATTACH THE FRAME TO TOP PANEL(A) USING 6 SCREWS(O1).
- ROTATE THE 9 FEET INTO THE HOLES IN THE PANEL(B/C/D/E/K).

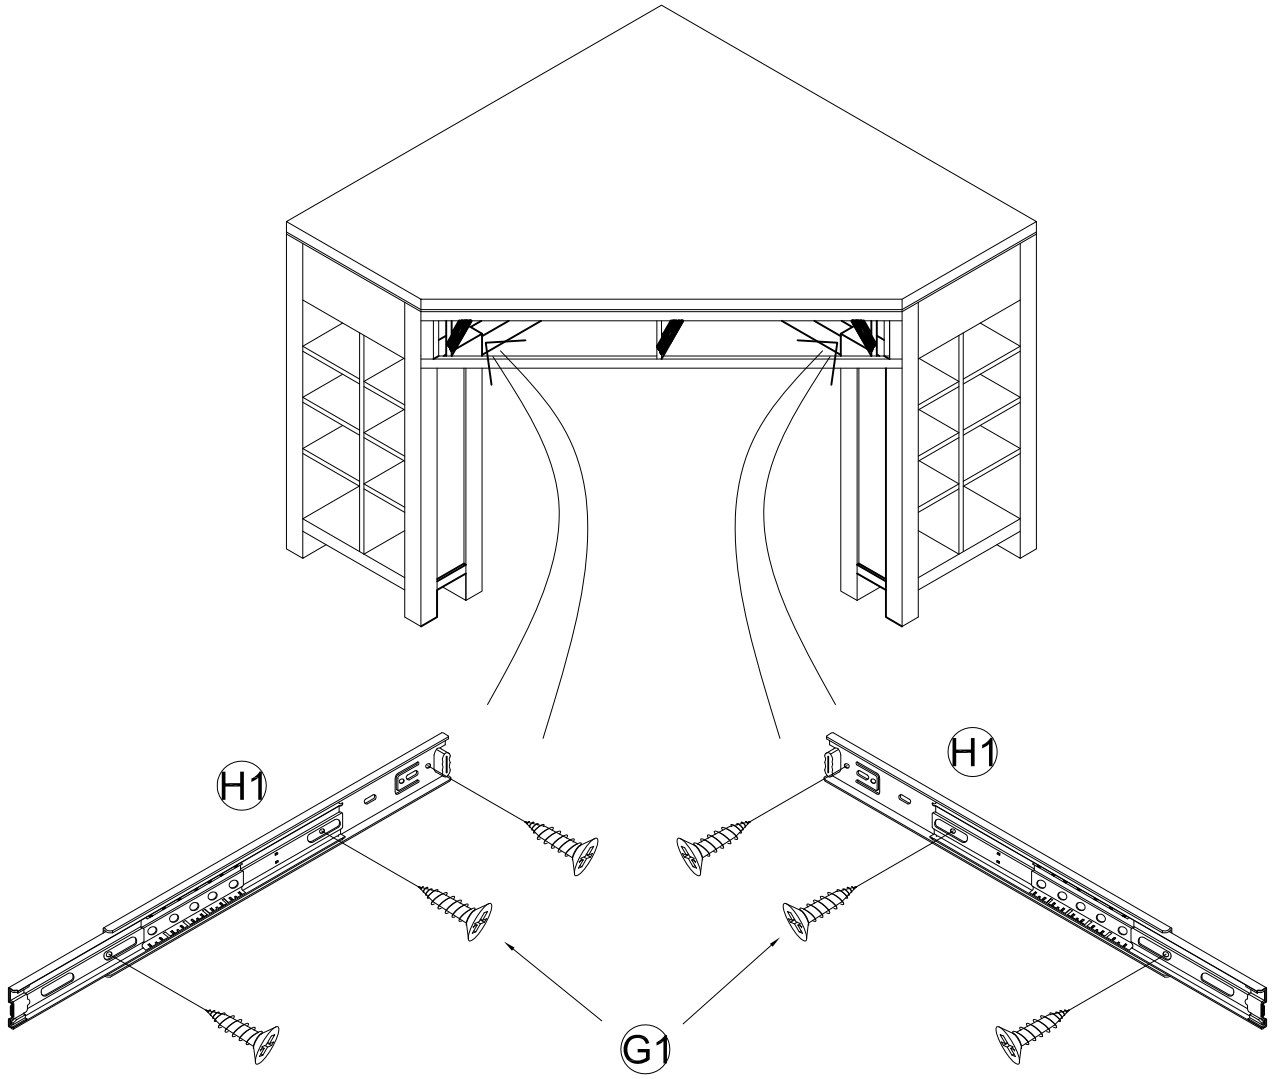

14).ASSEMBLE THE OUTER SLIDERS(H1).

- ATTACH THE OUTER SLIDERS(H1) TO PANELS(N/O/P) USING 12 SCREWS(G1).

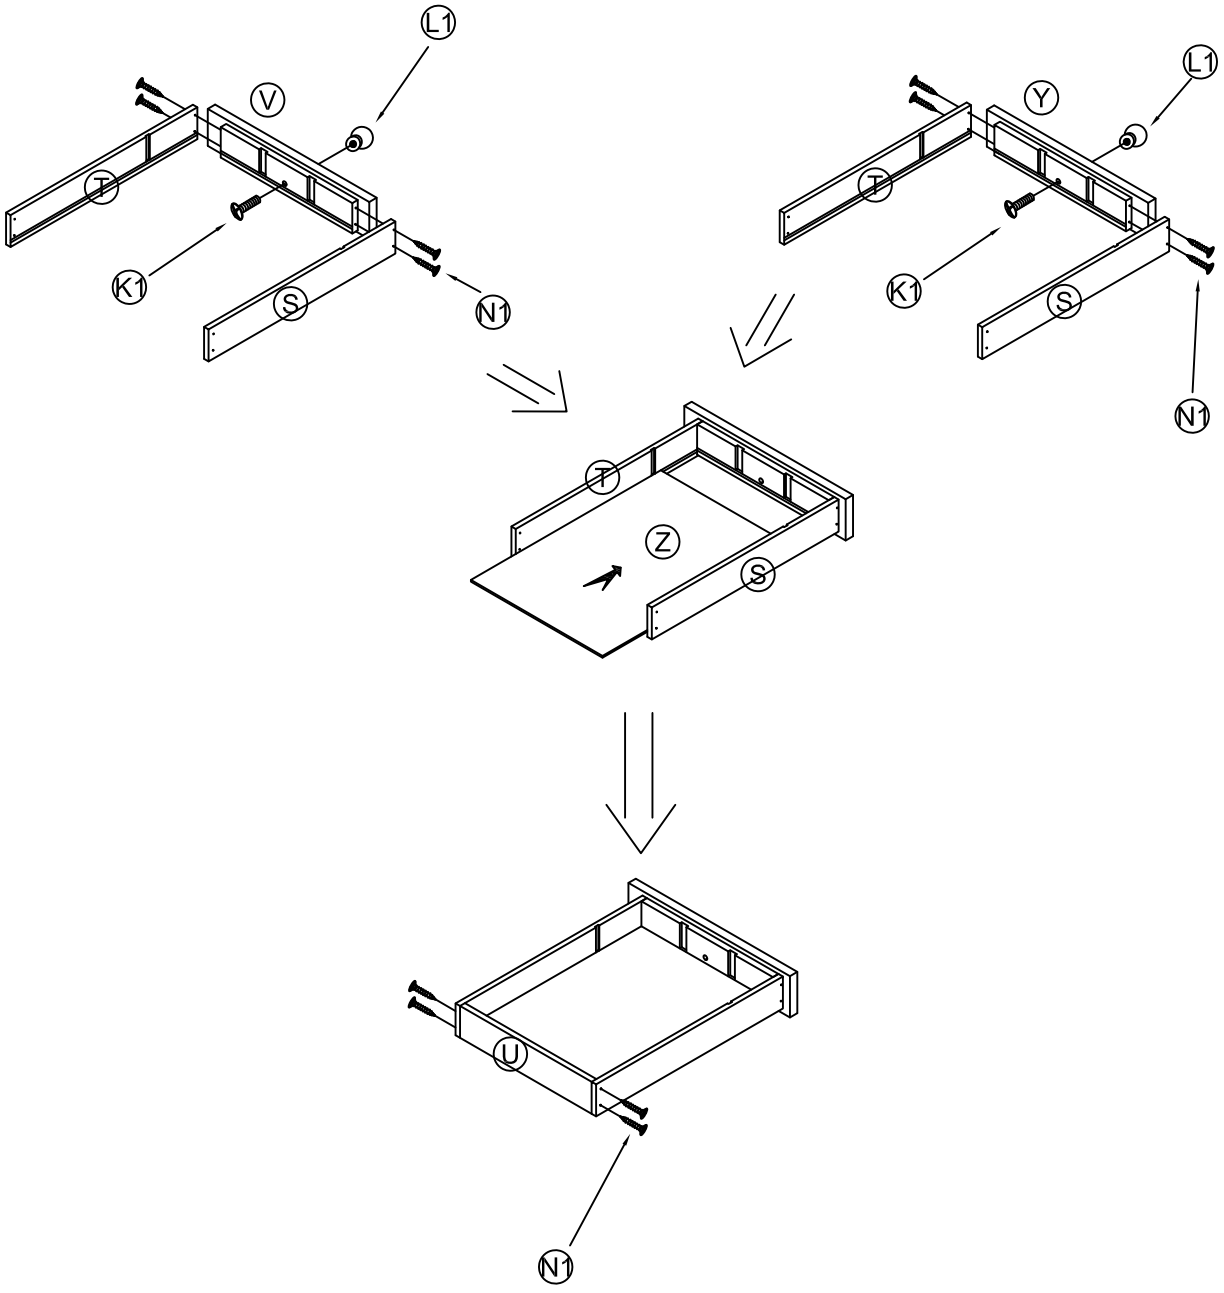

15).ASSEMBLE THE DRAWERS.

- ATTACH DRAWER PANEL SIDE(S/T) TO DRAWER PANEL FRONT(V/Y) USING 4 SCREWS(N1).
- ATTACH THE ONE KNOB(L1) TO DRAWER PANEL FRONT(V/Y) USING ONE SCREW(K1).
- INSERT THE DRAWER BOTTOM PANEL(Z) INTO THE SLOTS IN THE DRAWER PANEL SIDE(S/T).
- ATTACH DRAWER PANEL BACK(U) TO BETWEEN SIDE DRAWER PANELS(S/T) USING 4 SCREWS(N1).

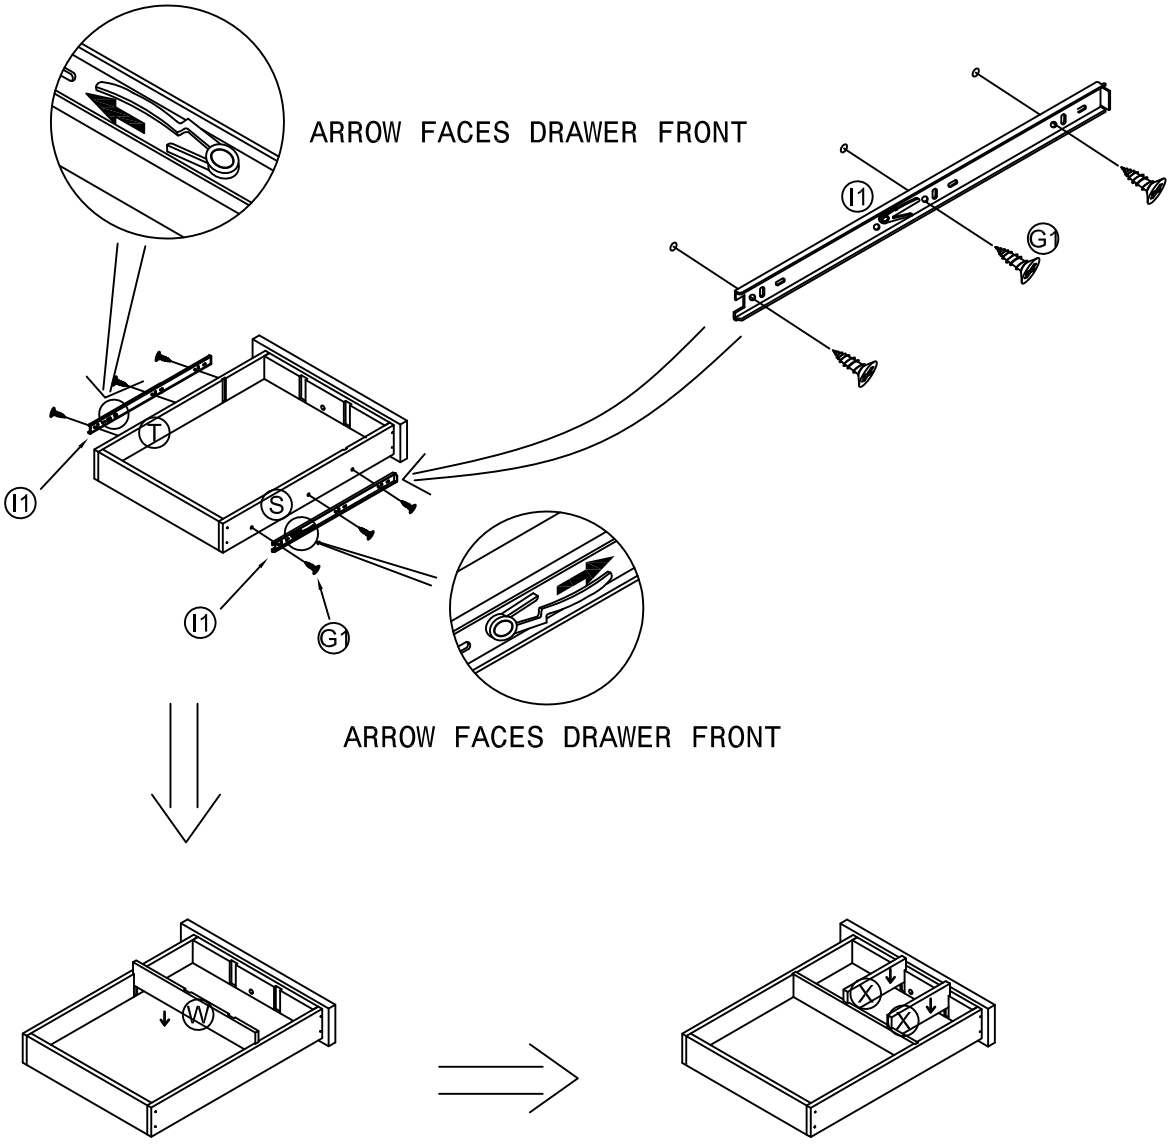

16). ASSEMBLE THE INNER SLIDES(I1) AND PANELS(W/X).

- ATTACH THE INNER SLIDERS(I1) TO DRAWER SIDE PANEL(T/S) USING 6 SCREWAS(G1).
- INSERT THE PANELS(W/X) IN THE DRAWERS.

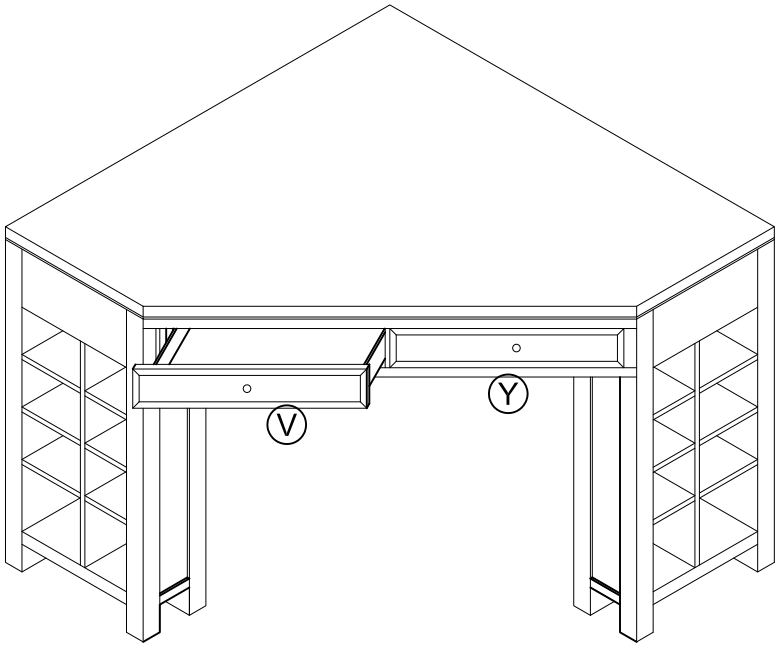

17).ASSEMBLE THE DRAWERS.

- INSERT 2 DRAWERS INTO THE SLIDERS.